



PORTABLE GPS TRACKER USER GUIDE

- **Dimension:** 74.5mm X 41.5mm X 26mm (2.93in X 1.63in X 1.02in)
- **Weight:** 80g (2.82oz)
- **Battery:** 2400mAh Li-Polymer
- **Nominal supply voltage:** +/- 5V
- **Current consumption:** <1000mA
- **Operating temperature:** -35° C to +75° C (-31° F to +167° F)
- **Storage temperature:** -40° C to +85° C (-40° F to +185° F)
- **Single Battery Charge Lasts** Up to 14 days
- **LTE - CAT M1**

POWER

BATTERY

CELL

GPS

RESET



Contact Us

info@fleetmasterusa.com 619-684-1181
www.fleetmasterusa.com



HOW TO CHARGE THE PORTABLE GPS TRACKER

IMPORTANT: Fully charge your GPS tracker before first use.

- Plug-in the tracker using the USB C charging cable (provided in the packaging) in an open space.*
- The light below the battery icon will turn solid RED (as shown in the picture).
- When fully charged, the RED LED light will turn off, and no lights will blink on the face of the device.
- Average charging time, for a fully depleted battery, is 6-8 hours.
- Based on 1 minute motion updates and an average drive time of 1 hr per day, a full charge will last for 12-14 days.
- When the battery is below 10% (low battery) the RED LED will blink rapidly.



* Do not charge device in a sealed container with limited convection. This will heat up the device.

INSTALL iOS/ANDROID APP

- Download and install our App from the Google Play or Apple App Store. Search for **GPS-Fleet** on iOS and **gpsandfleet** on Android.
- Use the account login credentials provided during activation to access your tracking platform.



LOGIN INFORMATION AND NAMING YOUR TRACKER

- Your login information will be emailed to you. Use the login username and password received by email to access your account: at www.gpsandfleet.io.
- Once logged in, please name your trackers so they show on the platform.
- Go to Settings > Add/Edit Driver > Add Driver: Enter a name, Choose an icon, and hit the Add Vehicle.
- Once done you will see the unit on the map. If you have multiple units, repeat this step and remember to match the IMEI number to the correct tracker you are setting up.



For any questions,

contact our 24/7 email support at support@gpsandfleet.com

ACQUIRING GPS LOCK

- After account is created, restart your GPS tracker by pushing the POWER BUTTON.
- When the POWER BUTTON is pushed down for a few seconds, you should see the lights blink in the following order: RED, BLUE, GREEN.
- When connecting to GPS satellite, the lights below the icons will flash in a systematic pattern.
- When GPS LOCK has been acquired, all lights will be off on the face of the device.
- If Cell / GPS is not identified or registered, the respective LED lights will blink every second.

When both Cell/ GPS lock have been registered, there will be no lights on the face of the device.

- The device will show at its current location on your platform if GPS lock has been acquired.

If GPS lock is not acquired by this time, relocate GPS tracker near a window or place on the dash of a vehicle and take it for a short drive.

- RESET Button – Also known as the S.O.S. button. Hold down for 3 seconds. This will wake up the device and once GPS LOCK is acquired, it will update current location.
- When POWERING OFF the device, you should see the lights blink in the following order: RED, BLUE, GREEN.



ATTACH GPS TRACKER TO VEHICLE/ASSET

- After GPS LOCK has been acquired AND you have confirmed that your device is updating on your platform, place the device inside your vehicle/asset. If you have a magnetic case (sold separately), first place the GPS tracker inside the case.
- If placing inside a vehicle, make sure the GPS tracker is not fully surrounded by metal.
- If placing in a backpack or purse, place it in an outside pocket, away from any metals.